




Installation

Radiator Guards

Version 1.2018

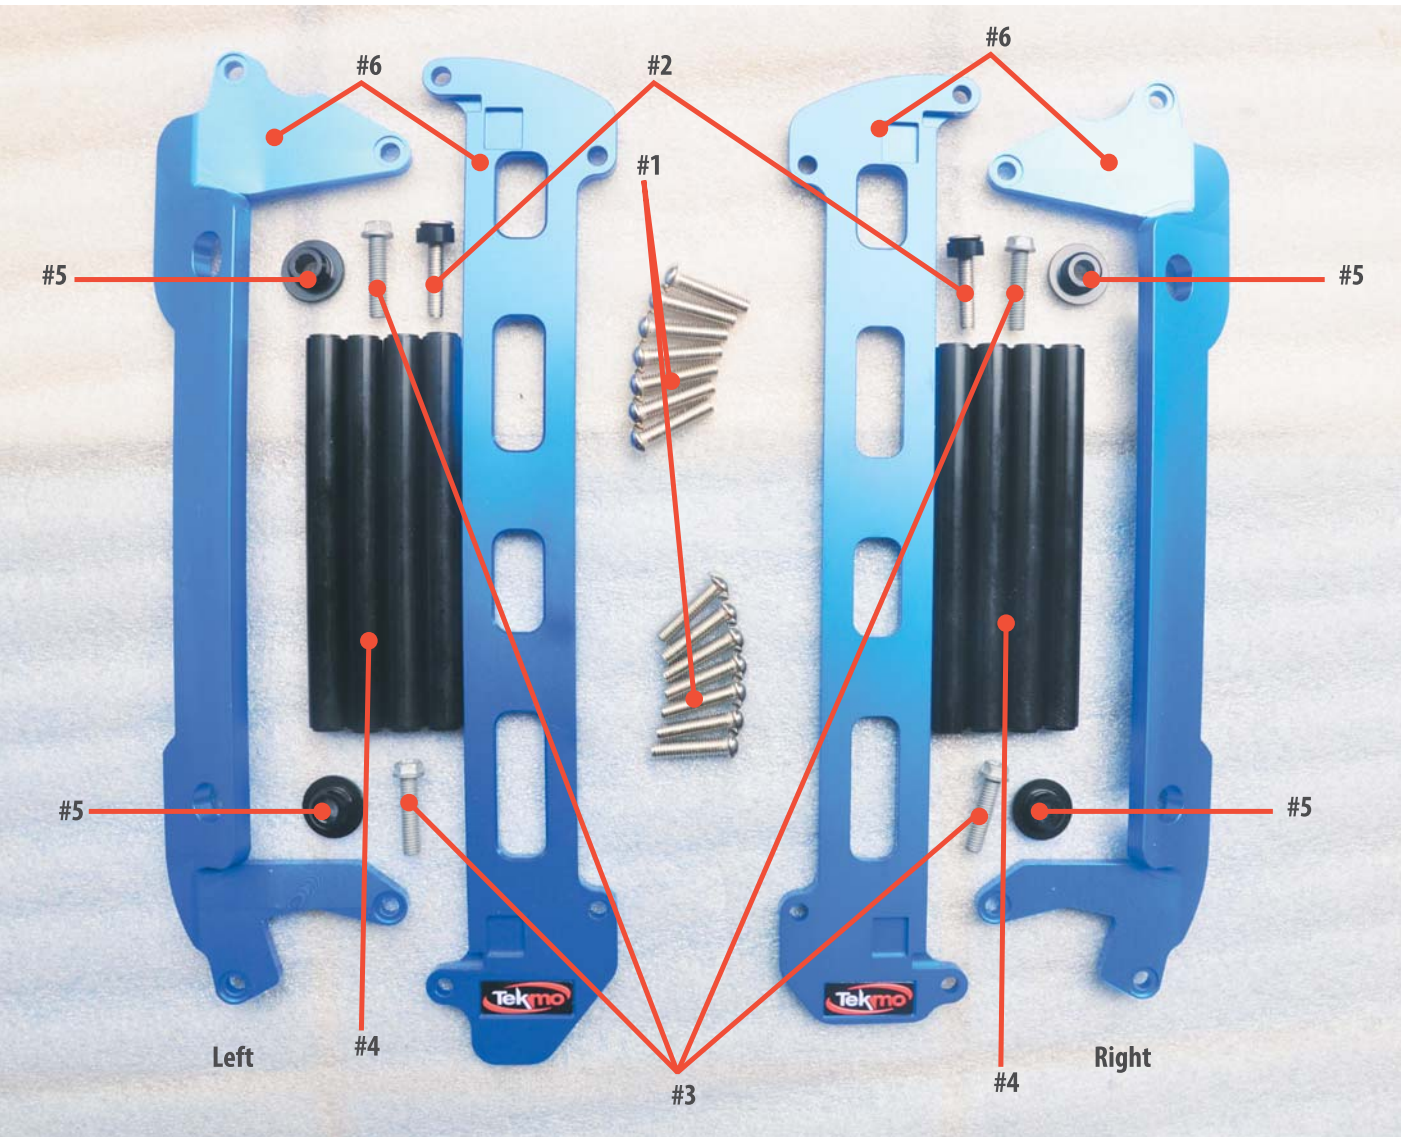

Parts supplied

1. 14 x button head screws .
2. 2 x flat head screws plus 2 x 7mm spacers.
3. 4 x m6 x 25mm hex head bolts.
4. 8 x 12mm connecting rods.
5. 4 x Aluminum bushes .
6. 1 set of left and right Aluminum guards.




Step 1

Remove the radiator shrouds and the plastic fins, loosen the top radiator hose clamp.



Step 2

Bolt on the 2 front connecting rods using the button head screws (Part #1).

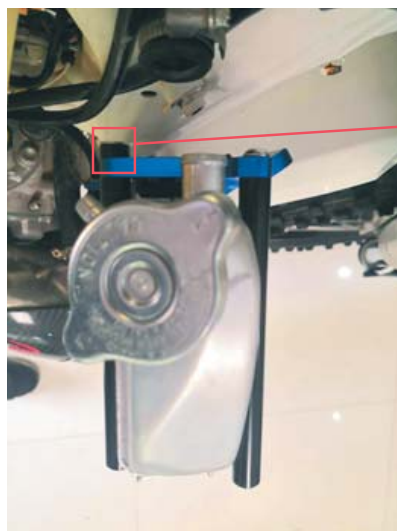

Part #2


Step 3

Place on the radiator and bolt on the rear top connecting rod using the 7mm spacer and the flat head screw (Part #2) then bolt on the rear bottom connecting rod using the button head screw.



Step 4

Push the top hose back on the radiator and tighten.

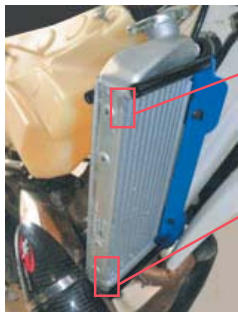

(1)

(1)



Logo at the bottom part.



(2)

(2)

Step 5

Install the outer bracket making sure the small tabs (1) on the radiator go into the slots (2) on the outer guard (If your radiator have been previously bent you may find these tabs need to adjusted).



Step 6

Insert black bushes (Part #5) into plastic radiator fins, then install fins on radiator using the m6 x 25 hex head bolts (Part #3) ensuring that the 2 tabs on the outside of the fins locate into the square slots on the out plate of the radiator guard .



Step 7

Repeat steps 1-6 for the left hand radiator guard.

Step 8

Reinstall the radiator shrouds fixing to tank first then pop over the radiator fins and bolt to the radiator fins.



TEKMO

T: 0086 13570236055

E: enquiry@tekmoracing.com

Address : Block46-102, Lvyin Wenshabao,
Baoshan Road, Zhangyang Area,
Zhangmutou Town, Guangdong, China.

Copyright ©.All rights reserved.

TEKMO and other product and feature marks are trademarks of the
TEKMO Division as displayed at www.tekmoracing.com
Specifications and price are subject to change without notice.

www.tekmostore.com
www.tekmoracing.com